

SINGER

29-3

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 29-3

List of Parts Complete

for

Machine No. 29-3

No.	Name
*8572	Arm of Machine
118 E	" " " Base Screw
4288	" " " Side Cover (back)
51224 W	" " " " " " Thumb Screw
8573	" " " " " (front)
207 F	" " " " " " Screw
8559	Check Lever
8554	" " " Joint Pin
8555	" " " Spring
219 J	" " " " Screw
14020	" " " " Steady Pin
8559	Feed Motion Bell Crank Lever
194 E	" " " " " " Joint Screw
8560	" " " " " Cam Wheel with 33523
2117	" " " " " Pin
8562	" " " " " Ring Slide Bar with 1816
1816	" " " " " " Cam Roller and Stud
8551	Feeding Foot
8557	" " " (narrow fork, fine)
8558	" " " (" " coarse)
193 D	" " " Screw
8575	Foot Bar
8559	" " " Hinge Pin
8564	" " " Revolving Joint

8594	Foot Bar Revolving Joint Bearing
8564	Foot Bar Revolving Joint Bearing complete, Nos. 8564, 8571 and 8594
33527	Foot Bar Revolving Joint Slide Rod
8571	" " " " Washer
8565	Foot Bar Revolving Joint complete, Nos. 8566 and 33527
33520	" " " " 8565 with 8569
*8070	Head of Arm
*33524	" " " 8070 with 41D, 60F, 193F, 288D, 8556, 8559, 8562, 8573 to 8577, 8615 to 8617, 8619, 8620, 8624, 8671, 8685, 8879, 33519, 33520, 33522 and two each 152F, 194E, 202F and 8618
128 D	Head of Arm Binding Screw
8573	" Revolving Bush
8574	" " " Friction Spring
8575	" " " " " Pin
193 F	" " " " " Screw
8576	" " " Handle
152 F	" " " " Screw
8577	" " " Supporting Washer
202 F	" " " " " Screw
128 E	Leg Screw
9331	" " Washer
8609	Lifter
66 F	" Bearing Screw
8608	Lifter Spring
2269	" " Pin
207 F	" " Screw

*8077	Lower arm and Bed
8582	" " " " Dowel Pin
8074	Machine Pulley with two 445C
445 C	" " Set Screw
8655	Needle Bar
33514	" " Cam and Pulley Wheel (two speed) 2 7/8 in. and 4 7/8 in. diam. with 1299C
3012	Needle Bar Cam and Pulley Wheel
1299 C	" " " " " " Set Screw
8002	" " Driving Lever with 1801 and 1402
1801	" " " " Cam Roller and Stud
8588	" " " " Joint Pin
8587	" " Needle Regulating Clamp with 237F
193 F	" " " " " Screw
8588	" " Piston Joint
8589	" " " " Pin
8050	" " Thread Retaining Spring
SS133 D	" " " " " Screw
8590	" " Threading Wire
8005	Needle Bar complete, Nos. 193F, 8587, 8055, 8050, and two SS133D
33519	Needle Bar 8093 with 8588 and 8589
237 F	" Clamping Screw
8591	" Plate
8592	" " (broad end)
84 J	" " Bearing Screw
8593	" " Catch Pin
8594	" " " " Spring

202 P	Needle Plate Case	Pin Spring	Screw
8595	"	"	Stud
8.70	Oil Cup with	8597 and 8595	
8.95	"	"	Oil Pad (felt)
327 D	"	"	Screw
8597	"	"	Spring
8598	Pinion Cover Plate		
333 E	"	"	Screw
8599	Rack		
8.00	"	Connecting Rod	
8.01	Reel Pin		
11241	"	"	Washer (clot)
33515	Start		
*33521	"	33515 with	8.00 and 33515
8.04	Shuttle Bobbin		
8.2 E	"	Tension Regulating Screw	
8.11	"	"	Spring
8.03	Shuttle complete, Nos.	8.2E, 8.04 and 8.11	
8.05	"	Carrier with	241D and 8.10
33521	"	"	8.05 with 33513
8.0	"	"	Driving Pinion with 127C
8.07	"	"	" " Bushing
127 C	"	"	" " Set Screw
8.03	"	"	Following Pinion
8.09	"	"	" " Stud
8.10	"	"	Spring
241 J	"	"	" Screw
3351	"	Driving Cam with	1299C

3012		Shuttle Driving Cam Pin
1808	"	" " " Roller and Stud
1299 C	"	" " " Set Screw
8013	"	" " Lever with 1808 and 8014
7 D	"	" " " Bearing Screw
8014	"	" " " Stud
2209	"	" " " " Pin
3015		Stitch Regulator
8015	"	" " " GIB
288 D	"	" " " Thumb Screw
33525		Tension complete, Nos. 8017, 8019, 8879, 33522 and two 8018
8017	"	" " Cu (release)
8018	"	" " Disc
8879	"	" " " Washer (cloth)
1500 D	"	" " Regulating Thumb Nut
8019	"	" " Spring
8018 E	"	" " Stud
33522	"	" " " 8018E with 1500D
8020		Thread Eyelet (head of arm)
193 F	"	" " " Screw
8021		Vibrating Presser Lifting Lever
41 D	"	" " " " " Screw
8024	"	" " " Regulating Lever
515 R	"	" " " " " Clamping Screw
8508	"	" " " " " " " Rivet
41 D	"	" " " " " Screw
8025	"	" " " " " Slide Block

33518	Vibrating Presser Regulating Lever Slide Block 8.25 with			
	515R and 8.26			
8.21	Vibrating Presser Regulating Lever Slide Block Washer			
1879	"	"	Roller	
8.23	"	"	"	Pin
33523	"	"	"	" 8.23 with 1879
8.27	"	"	Spring (flat)	
274 J	"	"	"	Screw
1539	"	"	"	" Lock Nut